Frenzy

OWNER'S MANUAL — Please read before using this equipment.

Cruise and race the waters in style on the new Frenzy jet ski!

Your RadioShack Frenzy is the coolest jet ski racer on water! Built to 1/20 scale, your Frenzy can reach speeds up to 100 feet per minute. The Frenzy comes in two frequencies (27 MHz and 49 MHz) so you can race with a friend. Check your Frenzy's box to see which frequency the boat uses.

Note: The Frenzy is not designed to be used in oceans, rivers, lakes, or streams. For the best results, use the Frenzy in a pool.

The Frenzy is perfect for beginning racers, ages six and up.

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Frenzy
Model:	60-4282
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your Frenzy.

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

RadioShack®

www.radioshack.com℠

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

INSTALLING BATTERIES

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

When the Frenzy stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the Frenzy for a week or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

In the Transmitter

The transmitter requires one 9V battery. For the best performance and longest life, we recommend a RadioShack alkaline battery.

1. Slide the battery compartment in the direction of the arrow to remove it.
2. Put the battery in the compartment as indicated by the polarity symbols (+ and –) marked inside.
3. Replace the cover and press it down to snap it shut.

When the transmitter's range decreases, replace its battery.

In the Boat

Your Frenzy requires six AA alkaline batteries for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Press the boat's **ON/OFF** switch to turn the boat off.
2. Press the seat-plate up to remove the rider and seat.

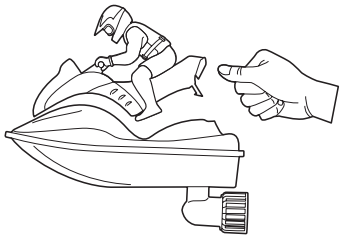

3. Turn the battery compartment cover's latches in the direction of the arrows until they stop, then lift up the cover to remove it.
4. Install the batteries in the compartment as indicated by the polarity symbols (+ and –) marked outside the compartment cover.
5. Replace the battery compartment cover and turn the latches to secure it.
6. Place the tab on the bottom front end of the seat-plate in the slot at the front of the boat.
7. Press the seat-plate down to snap it in place.

Notes:

- Make sure the seat is secured on the boat before putting the Frenzy on the water.
- If the Frenzy moves slowly or not at all, replace the Frenzy's batteries.

DRIVING THE FRENZY

Warnings:

- Do not use your boat in strong currents, in salt water or in any body of water with large waves.
- Never touch the propeller while it is spinning, and never put your fingers near the propeller when the boat is turned on.
- Never play outside during thunderstorms.
- Never play with your boat in strong winds.
- When the boat goes outside the transmitter's control range, it stops. Hold the transmitter as high as possible with the antenna vertical to try to re-establish contact. If you cannot, you must move closer to the boat to control it again, but be careful not to wade into deep water or strong currents.

Cautions:

- Keep the Frenzy away from grass growing in the water and other debris that could cause propeller damage. These items can jam the Frenzy's propeller and stop the boat.
- Do not leave your boat outside or in the water when you finish playing. Water might seep into the hull and damage electronic parts.

1. Press **ON/OFF** on the left side of the Frenzy's seat to **ON** and put the boat in the water.
2. Slide **ON/OFF** on the transmitter to **ON**.
3. Use the transmitter's control levers to move and steer the Frenzy.

Left Control Lever

- Push forward to move forward.
- Pull back to move backward.
- Release to stop.

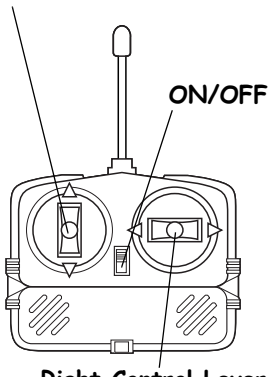

Right Control Lever

- Push left to turn left.
- Push right to turn right.
- Release to go straight.

Notes:

- The right control lever will only turn the Frenzy when you are using the left control lever to move the boat forward or backward.
- When the batteries begin to lose power, the boat slows down. Guide the boat to shore as soon as you notice it slowing down so you don't lose your Frenzy.

4. When you finish playing, take the boat out of the water and slide **ON/OFF** on both the boat and the transmitter to **OFF**.
5. Use the supplied plastic rod to drain water out of the hull.
6. Dry the boat thoroughly before you store it. Leave the boat's battery compartment cover open while it is in storage to allow moisture to evaporate.

HELPFUL HINTS

- Running your Frenzy continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your Frenzy's battery dies, let the Frenzy cool at least 10 minutes before installing new batteries.
- If someone uses a CB nearby, it might interfere with control of the Frenzy. If this happens, move the Frenzy away from the CB.
- You cannot operate your Frenzy near devices with transmitters that use the same frequency as your Frenzy (27 MHz or 49 MHz). Check your Frenzy's box to see which frequency your Frenzy uses.

CARE

Do not expose the boat to temperature extremes. Wipe the boat clean with a dry towel after playing. Do not use chemicals as they can damage the body. Modifying or tampering with the Frenzy's or the transmitter's internal components can cause a malfunction, invalidate the warranty and void your FCC authorization to operate the boat. If the Frenzy does not work properly, take them to your local RadioShack store for assistance.

USER-REPLACEABLE PARTS

You can order replacement parts for your boat at your local RadioShack store. Simply identify the part(s) you need from the exploded view, then find the part number in the parts list.

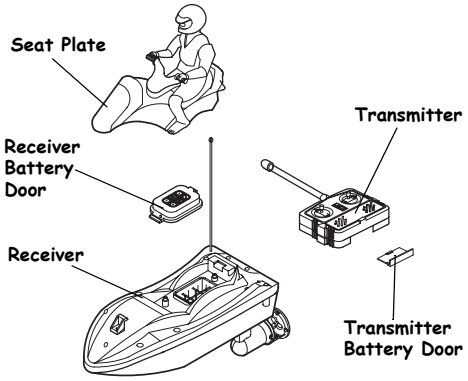

Description	RSU Number
Transmitter Battery Door	12175717
Receiver Battery Door	12342010
Transmitter (27MHz)	12342028
Transmitter (49MHz)	12342036
Service Manual	12342044
Owner's Manual	12342051

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company- owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

06A01
60-4282

Printed in China